



# Date Stamp Series

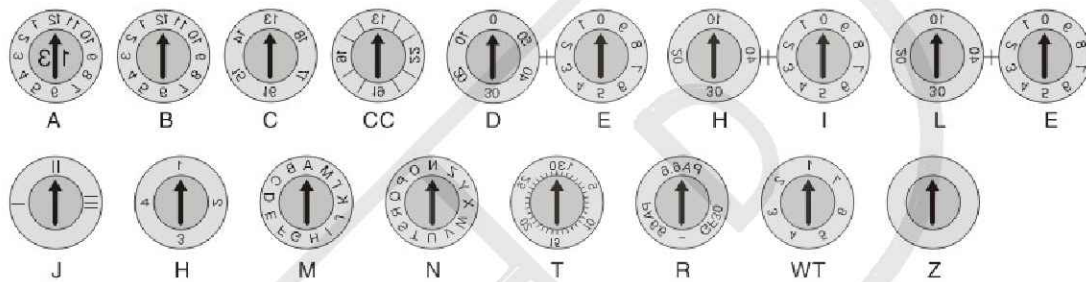

## Replaceable Date Stamp DATT1000

## OPITZ

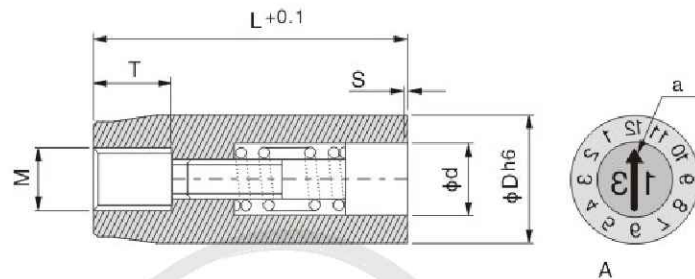




	φD	φd	L	M	T	a
DATT1000	3	1.6	14	2	3	0.3
	4	2.5	14	2	3	0.3
	5	3.1	17	3	3	0.4
	6	3.1	17	3	3	0.4
	8	4.6	20	4	4	0.4
	10	4.6	20	5	4	0.4
	12	6.4	25	6	6	0.6
	16	8.4	33	8	8	0.6



Order: Type No. - φD x φd x Pcs  
DATT1000 - 3 x 1.6 x 10

## Inner Pointer of Date Stamp

- Installation diagram

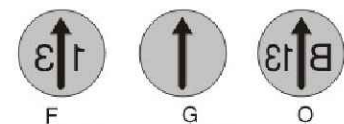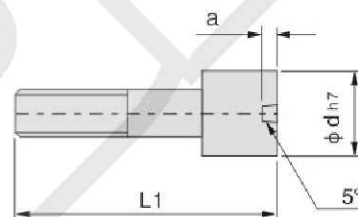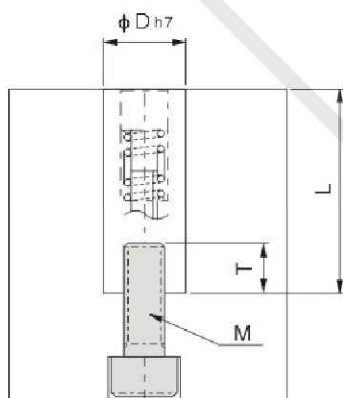

Year + Arrow	Arrow	AB+ Arrow	L1	φd	a
F/3/..	G/3/00	O/3/..	9	1.6	0.3
F/4/..	G/4/00	O/4/..	10.5	2.5	0.3
F/5/..	G/5/00	O/5/..	13	3.1	0.4
F/6/..	G/6/00	O/6/..	13	3.1	0.4
F/8/..	G/8/00	O/8/..	14	4.6	0.4
F/10/..	G/10/00	O/10/..	14	4.6	0.4
F/12/..	G/12/00	O/12/..	17	6.4	0.6
F/16/..	G/16/00	O/16/..	23	8.4	0.6



Fill in the start year after the model for order.

## BRAHMADEVI ENGINEERING PRODUCTS

Regd. Office :19, Martand Chowk, INDORE - 452 007 (M.P.) INDIA  
Ph. : +91 - 731 - 2720243, Fax : +91 - 731 - 2721554  
E-mail : ishan1809@yahoo.com, ruchir@dieaspares.com Website : [www.dieaspares.com](http://www.dieaspares.com)

## Replaceable Date Stamp DATT1200

## OPITZ

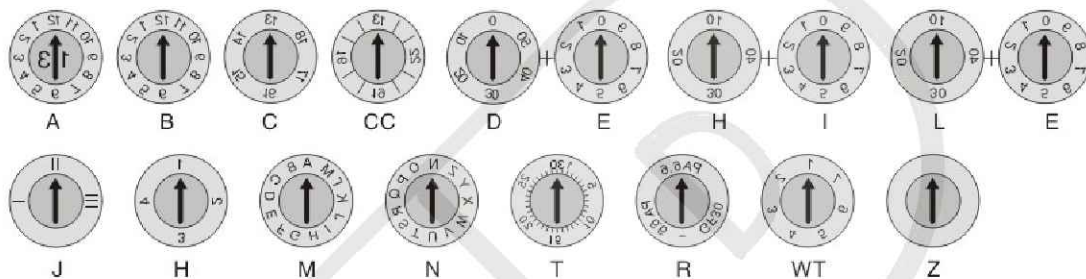
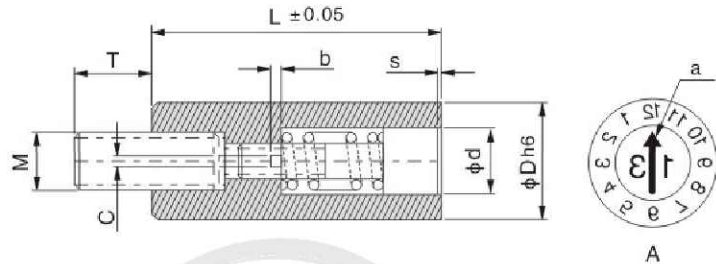


Type	φD	φd	L	M	T	a	b	c
DATT1200	3	1.6	14	2	3	0.3	0.5	0.5
	4	2.5	14	2	3	0.3	0.6	0.6
	5	3.1	17	3	3	0.4	0.8	0.8
	6	3.1	17	3	3	0.4	0.8	0.8
	8	4.6	20	4	4	0.4	1.0	1.0
	10	4.6	20	5	4	0.4	1.0	1.0
	12	6.4	25	6	6	0.6	1.5	1.5
	16	8.4	33	8	8	0.6	1.5	1.5

Order: Type No. - φD x φd x Pcs  
DATT1200 - 3 x 1.6 x 10

### Inner Pointer of Date Stamp

- Installation diagram

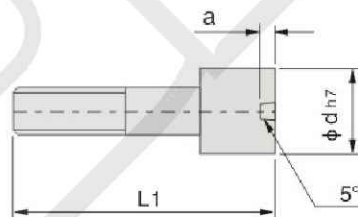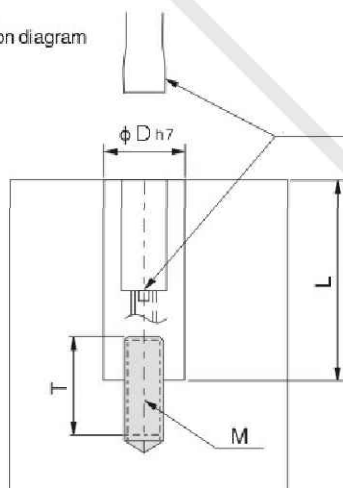



Year + Arrow	Arrow	AB + Arrow	L1	φd	a
F/3/..	G/3/00	O/3/..	9	1.6	0.3
F/4/..	G/4/00	O/4/..	10.5	2.5	0.3
F/5/..	G/5/00	O/5/..	13	3.1	0.4
F/6/..	G/6/00	O/6/..	13	3.1	0.4
F/8/..	G/8/00	O/8/..	14	4.6	0.4
F/10/..	G/10/00	O/10/..	14	4.6	0.4
F/12/..	G/12/00	O/12/..	17	6.4	0.6
F/16/..	G/16/00	O/16/..	23	8.4	0.6

Fill in the start year after the model for order.

# Date Stamp Series

## Replaceable Date Stamp DATT1300

### OPITZ

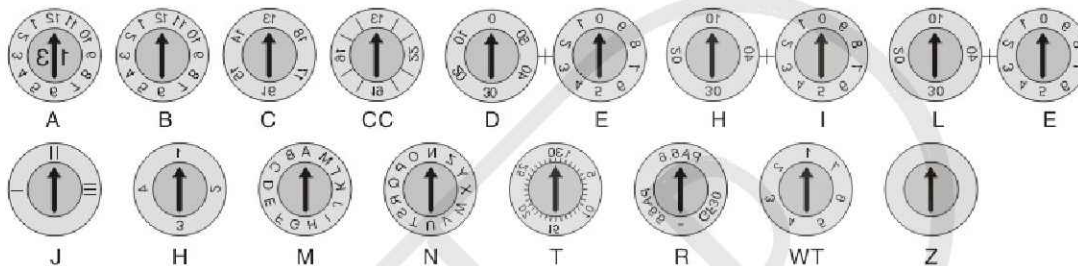
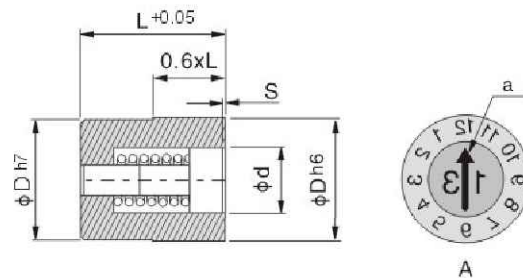


Type	φD	φd	L	a	b	φK
DATT1300	2.6	1.4	4	0.20	0.20	1.5
	2.8	1.4	4	0.20	0.20	1.5
	3	1.5	4	0.20	0.25	1.6
	3.5	1.5	5	0.20	0.25	1.8
	4	2.1	5	0.30	0.25	2.2
	5	3.1	8	0.40	0.20	3.2
	6	3.1	8	0.40	0.20	3.2
	8	4.4	10	0.40	0.25	4.2
	10	5.2	12	0.40	0.35	5.2
	12	6.2	14	0.60	0.35	6.2
	16	8.2	14	0.60	0.35	8.2

Order: Type No. - φD x φd x Pcs  
DATT1300 - 2.6 x 1.4 x 10

### Inner Pointer of Date Stamp

• Installation diagram

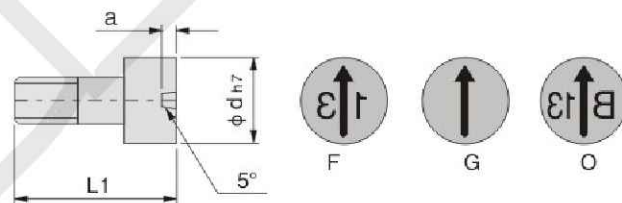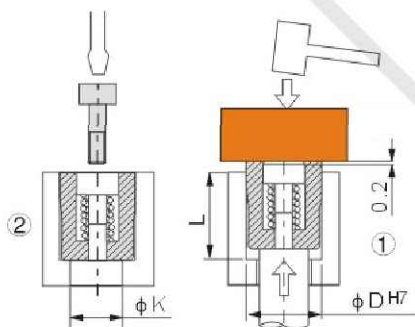

Year + Arrow	Arrow	AB + Arrow	L1	φd	a
F/1302.6/..	G/1302.6/00	O/1302.6/..	3.8	1.4	0.2
F/1302.8/..	G/1302.8/00	O/1302.8/..	3.8	1.4	0.2
F/1303/..	G/1303/00	O/1303/..	3.8	1.5	0.2
F/1303.5/..	G/1303.5/00	O/1303.5/..	4.8	1.5	0.2
F/1304/..	G/1304/00	O/1304/..	4.8	2.1	0.3
F/1305/..	G/1305/00	O/1305/..	7.8	3.1	0.4
F/1306/..	G/1306/00	O/1306/..	7.8	3.1	0.4
F/1308/..	G/1308/00	O/1308/..	9.8	4.4	0.4
F/1310/..	G/1310/00	O/1310/..	11.8	5.2	0.4
F/1312/..	G/1312/00	O/1312/..	13.8	6.2	0.6
F/1316/..	G/1316/00	O/1316/..	13.8	8.2	0.6

Fill in the start year after the model for order.

### BRAHMADEVI ENGINEERING PRODUCTS



Regd. Office :19, Martand Chowk, INDORE - 452 007 (M.P.) INDIA  
Ph. : +91 - 731 - 2720243, Fax : +91 - 731 - 2721554  
E-mail : ishan1809@yahoo.com, ruchir@diespares.com Website : [www.diespares.com](http://www.diespares.com)



## Replaceable Date Stamp DATT2000



## OPITZ

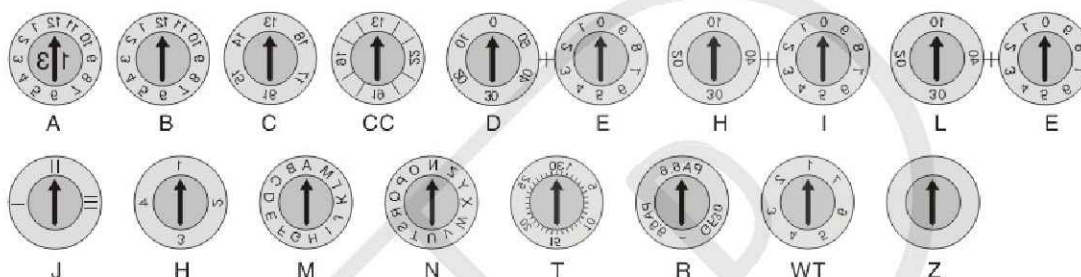
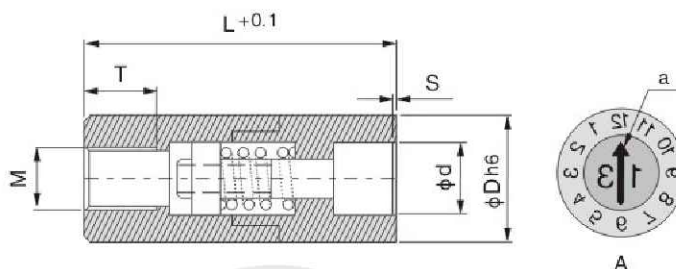


Type	φD	φd	L	M	T	a
DATT2000	4	2.5	14	2	3	0.3
	5	3.1	17	3	3	0.4
	6	3.1	17	3	3	0.4
	8	4.6	20	4	4	0.4
	10	4.6	20	5	4	0.4
	12	6.4	25	6	6	0.6
	16	8.4	33	8	8	0.6

Order: Type No. - φD x φd x Pcs  
DATT2000 - 4 x 2.5 x 10

## Inner Pointer of Date Stamp

- Installation diagram

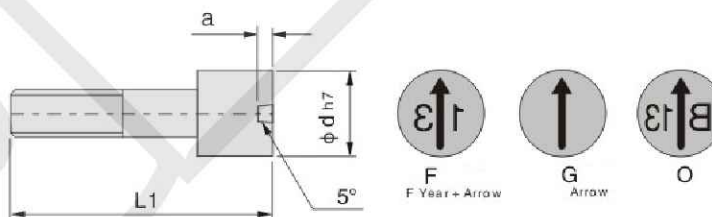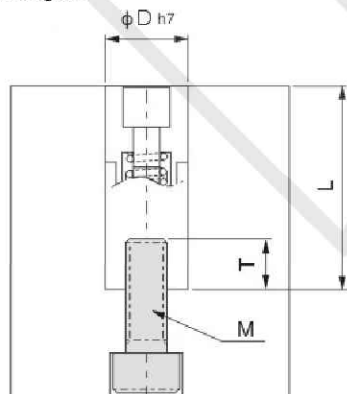

Year + Arrow	Arrow	AB+ Arrow	L1	φd	a
F/4/..	G/4/00	O/4/..	10.5	2.5	0.3
F/5/..	G/5/00	O/5/..	13	3.1	0.4
F/6/..	G/6/00	O/6/..	13	3.1	0.4
F/8/..	G/8/00	O/8/..	14	4.6	0.4
F/10/..	G/10/00	O/10/..	14	4.6	0.4
F/12/..	G/12/00	O/12/..	17	6.4	0.6
F/16/..	G/16/00	O/16/..	23	8.4	0.6

Fill in the start year after the model for order.



# Date Stamp Series



## Replaceable Date Stamp DATT2200



### OPITZ


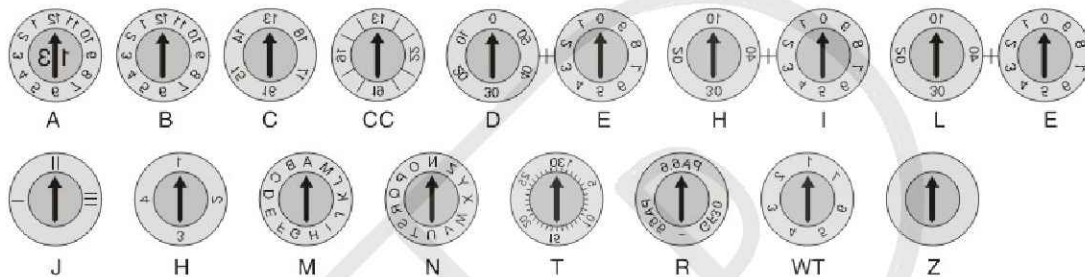
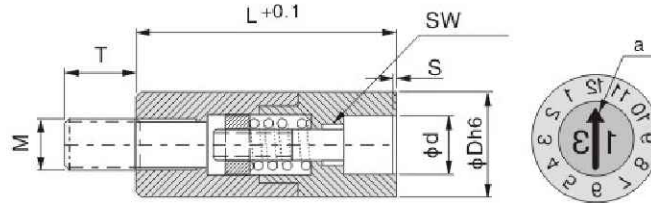


Type	φD	φd	L	M	T	a	SW
DATT2200	4	2.5	14	2	3	0.3	1.5
	5	3.1	17	3	3	0.4	2
	6	3.1	17	3	3	0.4	2
	8	4.6	20	4	4	0.4	3
	10	4.6	20	5	4	0.4	3
	12	6.4	25	6	6	0.6	4
	16	8.4	33	8	8	0.6	4



Order: Type No. - φD x φd x Pcs  
DATT2200 - 4 x 2.5 x 10

#### • Installation diagram

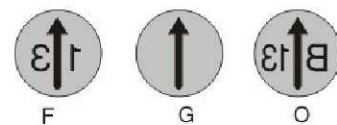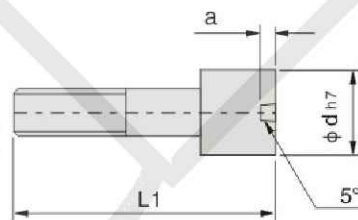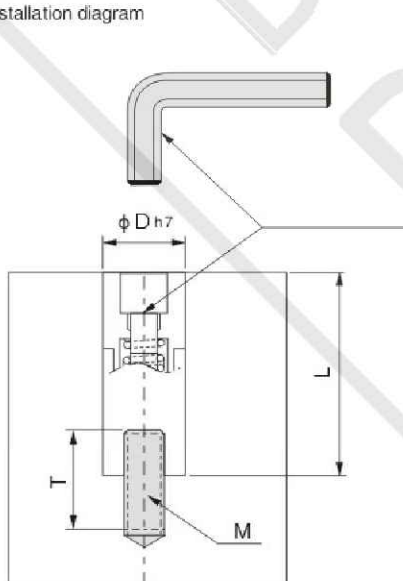

Year + Arrow	Arrow	AB + Arrow	L1	φd	a
F/4/..	G/4/00	O/4/..	10.5	2.5	0.3
F/5/..	G/5/00	O/5/..	13	3.1	0.4
F/6/..	G/6/00	O/6/..	13	3.1	0.4
F/8/..	G/8/00	O/8/..	14	4.6	0.4
F/10/..	G/10/00	O/10/..	14	4.6	0.4
F/12/..	G/12/00	O/12/..	17	6.4	0.6
F/16/..	G/16/00	O/16/..	23	8.4	0.6

Fill in the start year after the model for order.

## BRAHMADEVI ENGINEERING PRODUCTS

Regd. Office :19, Martand Chowk, INDORE - 452 007 (M.P.) INDIA  
Ph. : +91 - 731 - 2720243, Fax : +91 - 731 - 2721554  
E-mail : ishan1809@yahoo.com, ruchir@dieaspares.com Website : [www.dieaspares.com](http://www.dieaspares.com)